



# Source Water Assessment Program (SWAP) Report For Sturbridge Retirement Coop Corp.

## What is SWAP?

The Source Water Assessment Program (SWAP), established under the federal Safe Drinking Water Act, requires every state to:

- ? Inventory land uses within the recharge areas of all public water supply sources;
- ? Assess the susceptibility of drinking water sources to contamination from these land uses; and
- ? Publicize the results to provide support for improved protection.

## SWAP and Water Quality

Susceptibility of a drinking water source does *not* imply poor water quality. Actual water quality is best reflected by the results of regular water tests.

Water suppliers protect drinking water by monitoring for more than 100 chemicals, treating water supplies, and using source protection measures to ensure that safe water is delivered to the tap.

Prepared by the  
Massachusetts Department of  
Environmental Protection,  
Bureau of Resource Protection,  
Drinking Water Program

Date Prepared:  
January 26, 2001

**Table 1: Public Water System (PWS) Information**

<b>PWS NAME</b>	Sturbridge Retirement Coop Corp.
<b>PWS Address</b>	1 Kelly Road
<b>City/Town</b>	Sturbridge, Massachusetts
<b>PWS ID Number</b>	2287020
<b>Local Contact</b>	Darryl Ledoux, Water Operator
<b>Phone Number</b>	(508) 347-3212

<b>Well Name</b>	<b>Source ID#</b>	<b>Zone I (in feet)</b>	<b>IWPA (in feet)</b>	<b>Source Susceptibility</b>
Well #1	2287020-01G	218	506	Moderate
Well #2	2287020-02G	134	437	Moderate
Well #3	2287020-03G	210	520	Moderate
Well #4	2287020-04G	239	588	Moderate

## Introduction

We are all concerned about the quality of the water we drink. Drinking water wells may be threatened by many potential sources of contamination, including septic systems, road salting, and improper disposal of hazardous materials. Citizens and local officials can work together to better protect these drinking water sources.

### Purpose of this report:

This report is a planning tool to support local and state efforts to improve water supply protection. By identifying land uses within water supply protection areas that may be potential sources of contamination the assessment helps focus protection efforts on appropriate best management practices (BMPs) and drinking water source protection measures. Department of Environmental Protection (DEP) staff are available to provide information about funding and other resources that may be available to your community.

### This report includes:

1. Description of the Water System
2. Discussion of Land Uses within Protection Areas
3. Recommendations for Protection
4. Attachments, including a Map of the Protection Areas

## 1. Description of the Water System

Sturbridge Retirement Coop Corp. obtain its water supply from four bedrock wells (Well #1, #2, #3 & #4). Well #1 is located behind the main office, Well #2 on First Street, Well #3 on Second Street, and #4 in the Park Circle area. The wells have a Zone I of 218, 134, 210 and 239, respectively, feet and an Interim Wellhead Protection Area (IWPA) of 536, 437, 520 and 588 feet, respectively. The IWPA provides an interim protection area for a water supply well when the actual recharge area has not been delineated. The actual recharge area to the well may be significantly larger or smaller than the IWPA. The well is located in an aquifer with a high vulnerability to contamination due to the absence of

### What is a Protection Area?

A well's water supply protection area is the land around the well where protection activities should be focused. Each well has a Zone I protective radius and an Interim Wellhead Protection Area (IWPA).

- **The Zone I** is the area that should be owned or controlled by the water supplier and limited to water supply activities.
- **The IWPA** is the larger area that is likely to contribute water to the well.

In many instances the IWPA does not include the entire land area that could contribute water to the well. Therefore, the well may be susceptible to contamination from activities outside of the IWPA that are not identified in this report.

### What is Susceptibility?

Susceptibility is a measure of a well's potential to become contaminated due to land uses and activities within the Zone I and Interim Wellhead Protection Area (IWPA).

hydrogeologic barriers that can prevent contaminant migration. Please refer to the attached map of the Zone I and IWPA. Well #1 and #2 are not treated. Wells #3 and #4 use green sand filters, pH adjusted with soda ash solution and backwashed with potassium permanganate solution., to remove iron. Wells #1 and #3 are each 400 feet deep, Well #2 is 300 feet deep and Well #4 is 200 feet deep. For current information on monitoring results and treatment and a copy of the most recent Consumer Confidence Report please contact the Public Water System contact person listed above in Table 1. Drinking water monitoring reporting data is also available on the web via EPA's Envirofacts website at [http://www.epa.gov/enviro/html/sdwis/sdwis\\_query.html](http://www.epa.gov/enviro/html/sdwis/sdwis_query.html).

## 2. Discussion of Land Uses in the Protection Areas

There are a number of land uses and activities within the drinking water supply protection areas that are potential sources of contamination.

#### Key issues include:

1. **Inappropriate Activities in Zone Is;**
2. **An Aboveground Storage Tank (AST) With Heating Oil; and**
3. **Septic systems.**

The overall ranking of susceptibility to contamination for the well is Moderate, based on the presence of only moderate threat land use or activity in the IWPA, as seen in Table 2.

1. **Zone Is** – Currently, the well does not meet DEP's restrictions, which only allow water supply related activities in Zone Is. The facility's Zone I contain buildings (Mobil homes), access roads and parking areas. The public water supplier own and/or control all land encompassed by the Zone I. Please note that systems not meeting DEP Zone I requirements must get DEP approval and address Zone I issues prior to increasing water use or modifying systems.

#### Recommendations:

- V Remove all non-water supply activities from the Zone I to comply with DEP's Zone I requirements.
  - V Do not use or store pesticides, fertilizers or road salt within the Zone I.
2. **Aboveground Storage Tank (AST)** – There are ASTs located on cement located within the Zone I and IWPA. The ASTs are double walled, and those AST

**Table 2: Table of Activities within the Water Supply Protection Areas**

Potential Contaminant Sources	Zone I	IWPA	Threat	Comments
Parking areas, driveways & roads	All	All	Moderate	Limit road salt usage and provide drainage away from wells
Septic System	All	All	Moderate	See septic systems brochure in the appendix
Fuel Storage Above Ground	All	All	Moderate	Tank is on broken pavement, should be on an impervious surface
Structures	All	All	-	Non-water supply structures in Zone I

\* -For more information on Contaminants of Concern associated with individual facility types and land uses please see the SWAP Draft Land Use / Associated Contaminants Matrix on DEP's website - [www.state.ma.us/dep/brp/dws/](http://www.state.ma.us/dep/brp/dws/).

## Glossary

**Zone I:** The area closest to a well; a 100 to 400 foot radius proportional to the well's pumping rate. To determine your Zone I radius, refer to the attached map.

**IWPA:** A 400 foot to ½ mile radius around a public water supply well proportional to its pumping rate; the area DEP recommends for protection in the absence of a defined Zone I. To determine IWPA radius, refer to the attached map.

**Zone II:** The primary recharge area defined by a hydrogeologic study.

**Aquifer:** An underground water-bearing layer of permeable material that will yield water in a usable quantity to a well.

**Hydrogeologic Barrier:** An underground layer of impermeable material that resists penetration by water.

**Recharge Area:** The surface area that contributes water to a well.

lines going into the Mobil Home and lie within the Zone 1 were replaced with PVC encased around the lines. If managed improperly, Aboveground Storage Tanks can be a potential source contamination due to leaks or spills of the chemicals they store.

### Recommendations:

- ✓ Aboveground storage tanks in your IWPA should be located on an impermeable surface, and also contained in an area large enough to hold 110% of the complete liquid volume, should a spill occur.
- ✓ Upgrade all oil/hazardous material storage tanks to incorporate proper containment and safety practices. Any modifications to the AST must be accomplished in a manner consistent with Massachusetts's plumbing, building, and fire code requirements. Consult with the local fire department for any additional local code requirements regarding ASTs.

3. **Septic systems** – The septic system leaching field are located within the protection areas of the wells. Each tank is pumped once a year. If a septic system fails or is not properly maintained it could be a potential source of microbial contamination. Improper disposal of household hazardous chemicals to septic systems is a potential source of contamination to the water supply.

### Recommendations:

- ✓ Residents should be instructed on the proper disposal of spent household chemicals. Include custodial staff, groundskeepers, and certified operator.
- ✓ Septic system components should be located, inspected, and maintained on a regular basis. Refer to the attachments for more information regarding septic systems.

Implementing the following recommendations will reduce the system's susceptibility to contamination.

## 3. Protection Recommendations

Implementing protection measures and best management practices (BMPs) will reduce the well's susceptibility to contamination. Sturbridge Retirement Coop Corp is commended for sending flyers to residents about how to protect the areas around the well, and information sharing about protection. Sturbridge Retirement Coop Corp should review and adopt the key recommendations above and the following:

### Zone I:

- ✓ Consider well relocation if Zone I threats cannot be mitigated.
- ✓ Prohibit public access to the well and pumphouse by locking facilities, gating roads, and posting signs.
- ✓ Conduct regular inspections of the Zone I. Look for illegal dumping, evidence of vandalism, check any above ground tanks for leaks, etc.
- ✓ Since some of the mobil homes are in the Zone 1, continue utilizing the structures in the Zone 1, use BMPs and restrict activities that could pose a threat to the water supply.

### Training and Education:

- ✓ Train staff on proper hazardous material use, disposal, emergency response, and best management practices; include custodial staff, groundskeepers, certified operator, and food preparation staff. Post labels as appropriate on raw materials and hazardous waste.
- ✓ Post drinking water protection area signs at key visibility locations.

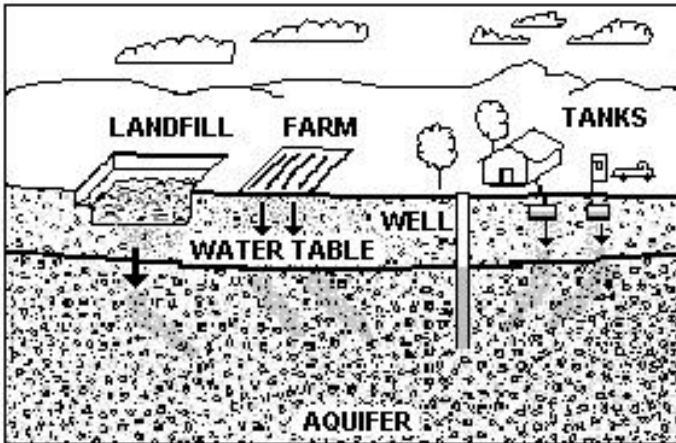


Figure 1: Example of how a well could become contaminated by different land uses and activities.

### For More Information:

Contact Josephine Yemoh-Ndi in DEP's Worcester Office at (508) 792-7650 x 5030 for more information and for assistance in improving current protection measures.

More information relating to drinking water and source protection is available on the Drinking Water Program web site at:

[www.state.ma.us/dep/brp/dws/](http://www.state.ma.us/dep/brp/dws/)

### Additional Documents:

To help with source protection efforts, more information is available by request or online at [www.state.ma.us/dep/brp/dws/](http://www.state.ma.us/dep/brp/dws/), including:

1. Water Supply Protection Guidance Materials such as model regulations, Best Management Practice information, and general water supply protection information.
2. MA DEP SWAP Strategy
3. Land Use Pollution Potential Matrix
4. Draft Land/Associated Contaminants Matrix

Copies of this assessment have been provided to the public water supplier, town boards, the town library and the local media.

### Facilities Management:

- V Implement standard operating procedures regarding proper storage, use and disposal of hazardous materials. To learn more, see the hazardous materials guidance manual at [www.state.ma.us/dep/bwp/dhm/dhmpubs.html](http://www.state.ma.us/dep/bwp/dhm/dhmpubs.html)

### Planning:

- V Work with local officials in Sturbridge to include the Sturbridge Retirement Coop Corp. IWPA in Aquifer Protection District Bylaws and to assist you in improving protection.
- V Have a plan to address short-term water shortages and long-term water demands. Keep the phone number of a bottled water company readily available.
- V Supplement the SWAP assessment with additional local information and incorporate it into water supply educational efforts. Use a land use inventory to assist in setting priorities, focusing inspections, and creating educational activities.

### Funding:

The Department's Wellhead Grant Protection Program provides funds to assist public water suppliers in addressing Wellhead protection through local projects. Protection recommendations discussed in this document may be eligible for funding under the 2001 "Wellhead Protection Grant Program". For additional information, please refer to the attached program fact sheet. Please note: each program year the Department posts a new Request for Response for the Grant program (RFR). Other funding opportunities are described in "Grant and Loan Programs: Opportunities for Watershed Protection, Planning and Implementation" at <http://www.state.ma.us/dep/brp/mf/files/glprgm.pdf>.

These recommendations are only part of your ongoing local drinking water source protection. Citizens and community officials should use this SWAP report to spur discussion of local drinking water protection measures.

## 4. Attachments

- Map of the Public Water Supply (PWS) Protection Area.
- Recommended Source Protection Measures Factsheet
- Your Septic System Brochure
- Wellhead Protection Grant Program Fact Sheet